



F700

Manual

F700

User manual

Index

| | |
|----------------------------|----|
| Introduction | 6 |
| Sales package content..... | 7 |
| Precautions for use | 8 |
| Overview | 12 |
| Installation | 14 |
| Keyboard..... | 18 |
| Numeric keypad | 21 |
| Display | 22 |
| System icons | 23 |
| Applications menu | 24 |
| Settings | 28 |
| Calling | 30 |
| Messages..... | 34 |
| Contacts | 38 |
| Bluetooth® connection..... | 40 |
| Troubleshooting..... | 41 |
| Regulation | 44 |

Introduction

Thank you for choosing Co-Comm F700 device. This phone is designed for being used with GSM 900/1800 and UMTS 900/2100 MHz networks and for operation requires a valid SIM card from your network operator. Please consult your network operator for more information.

Security instructions

Please read following instructions carefully before you start using your Co-Comm F700 telephone:

- Keep this manual for future reference.
- Keep the phone away from moisture.
- Place the phone on a stable surface before start using.
- If any of the following situations occurs, have it checked by a qualified service technician:
 - It has been exposed to moisture.
 - It has been dropped or damaged.
 - It has obvious signs of breakage.
- Do not place the phone at a distance of less than 1.5 m from a water source.
- Do not use the device in areas where there is risk of explosion.

Sales package contents

Please check the sales package includes following components. If any items are missing, please contact your dealer.



1. Co-Comm F700 wireless phone



2. User manual



3. Warranty card



4. AC/DC power adapter



5. Li-Po rechargeable battery



6. Security screw, key and QC PASS sticker



7. USB data cable

Precautions for use

Operating Environment

Your Co-Comm F700 phone is a RF transmitter, so please turn off your terminal or disable radio functions within following situations:

- When you are in an airplane.
- When you are in the vicinity of flammable atmospheres and is indicated by the entity responsible for risk management.
- When you are in the vicinity of electro-explosive devices and is indicated by the entity responsible for risk management.

Respect special regulations in force in any area, and always switch off your phone when its use is prohibited, or if it could cause danger. When connecting the phone or any accessory to another device, read user manual for detailed safety instructions. Do not connect incompatible products. It is recommended that the equipment should only be used in normal position for proper operation and personnel safety. Do not expose to temperatures below -10 °C or above 50 °C.

Medical equipment

Be sure to turn off the phone near electronic medical equipment which obviously require that the phone is turned off (such as pacemakers, hearing aids, etc.).

Most medical devices can be protected from RF signal of the phone, but not all of them. If you have any questions or need more information, consult your doctor or manufacturer of your medical device.

Precautions for use

Pacemakers

Pacemaker manufacturers warn that distance between phone and heart pacemaker must be at least 6 inches (15.3 cm).

People with pacemakers should consider the following:

- Always keep a distance (at least 6 inches) between phone and pacemaker when phone is on.
- Do not carry your phone near your chest.
- Use the phone with the opposite ear from the pacemaker.

Please turn off your phone if you feel there is interference, consult your doctor as soon as possible.

Emergency calls

Like any mobile phone, this device works with radio signals that can not guarantee connection in all conditions. Therefore, you should never rely solely on a mobile phone for essential communications like medical emergencies. To make or receive calls, phone must be switched on and in a service area with adequate signal strength. To make an emergency call, enter local emergency number in standby mode and press call button.

Precautions for use

Care and maintenance

Your phone is a product of high technology and should be treated with care. Following tips will allow you to enjoy this product for a longer period of time:


- Keep the phone away from children and pets. They could damage it accidentally or choke on small parts.
- Keep the phone dry and avoid liquids that could corrode it. Do not use the phone with wet hands, which may cause electric shock.
- Do not place the phone in areas of excessive heat, which shorten its life cycle, damage batteries, or melt accessories.
- Do not place the phone in cold areas. When phone warms up to its normal operating temperature, moisture can accumulate, which may damage electronic circuits.
- Do not place the phone in areas exposed to sunlight as it may cause overheating.
- Do not place the phone near flammable liquids, gases or explosive substances.
- Do not drop or knock the phone. Rough handling can damage electronic circuits.
- To clean the telephone, use a damp or antistatic cloth. Do not use a dry or static cloth.
- Do not use chemicals such as cleaning solvents to clean phone surface. Turn off your phone before cleaning.
- Do not apply paint over the phone, as it can prevent proper operation.
- The manufacturer's warranty does not cover repair appliance if the phone or battery gets wet, or phone label is damaged even when phone warranty has not expired.

Precautions for use


Battery use

- Never use any charger or battery if damaged. Use the battery correctly.
- Do not short-circuit the battery, as this may damage it or cause a fire.
- Do not subject the battery to high temperatures or fire as it may explode.
- Return old battery to your dealer, or place it in locations designated for recycling.
- Do not throw the battery in household waste.
- Charging time depends on the remaining battery charge, type of battery and charger used.
- Battery can be charged and discharged hundreds of times, but its duration will gradually decrease.
- When operation time is noticeably shorter than normal, replace the battery with a new one.
- Use only original chargers, batteries and accessories approved by the manufacturer.
- Disconnect the charger from the electrical plug and the device when the phone is not in use.
- Do not overload your battery as it may damage or shorten its life.
- Do not expose the battery to places of extremely hot or cold temperatures, as it will reduce battery capacity.
- Li-ion batteries are particularly affected by temperatures below 0° C.

Overview

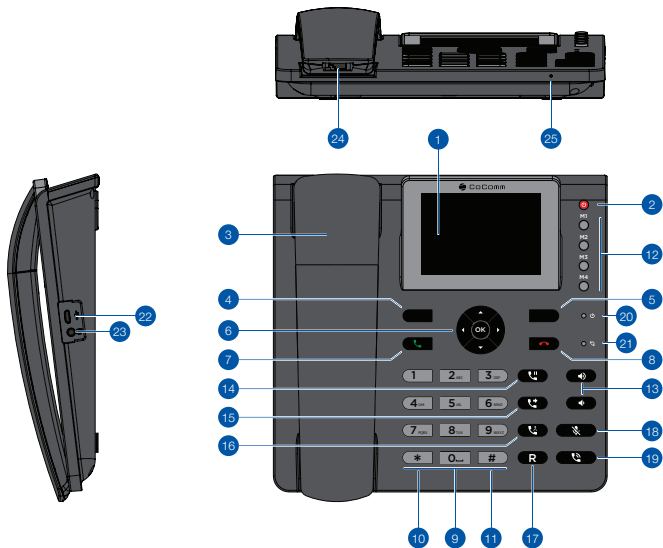

-
- | | |
|---|---|
| 1. LCD screen | 10. [*] Asterisk key |
| 2. [] Turn on / off | 11. [#] Hash key |
| 3. Handset / receiver | 12. [M1...M4] Speed dial keys M1 to M8 |
| 4. [-] Menu left soft key | 13. [< / >] Volume keys |
| 5. [-] Menu right soft key | 14. [] Hold key |
| 6. Direction and confirmation buttons | 15. [] Transfer key |
| 7. [] Call key | 16. [] Multi-conference key |
| 8. [] End call key / back to main menu | 17. [R] Redial key |
| 9. Alphanumeric keypad | 18. [] Mute key |
| | 19. [] Hands-free key |
-

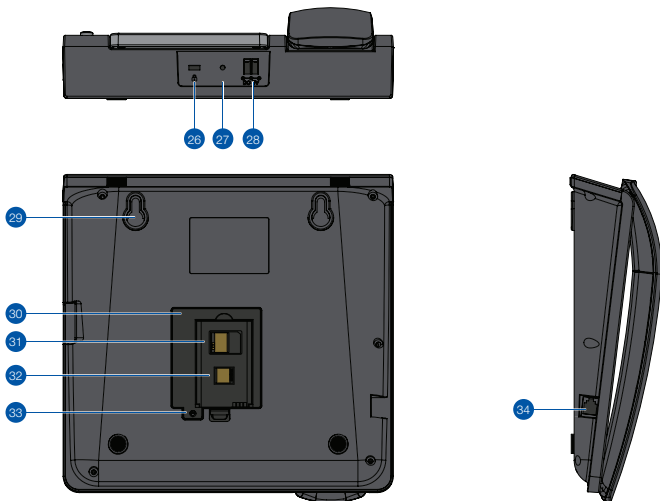


-
- | | |
|--|--------------------------------------|
| 20. Charging indicator | 28. DC 5V power connector |
| 21. Hands-free indicator | 29. Wall mounting holes |
| 22. Micro-USB data port for software update | 30. Rechargeable battery compartment |
| 23. Jack connector for earphones / handsfree | 31. SIM card compartment |
| 24. Handset RJ9 connector | 32. Micro-SD card compartment |
| 25. Microphone for handsfree function | 33. Hole for security screw |
| 26. Anti-theft cable slot | 34. Receiver RJ9 connector |
| 27. Microphone for ambient noise cancelling | |
-

Installation

Follow below steps to install the SIM card and different accessories of your wireless phone Co-Comm F700:

1. Disconnect power adapter and remove battery cover compartment located behind the device to install the SIM card and the micro-SD memory card. To install the SIM card, slide the metal tab in the direction shown to unlock it, turn it up, and place the card as shown in the figure. Turn the metal tab down and slide to the initial position to lock.

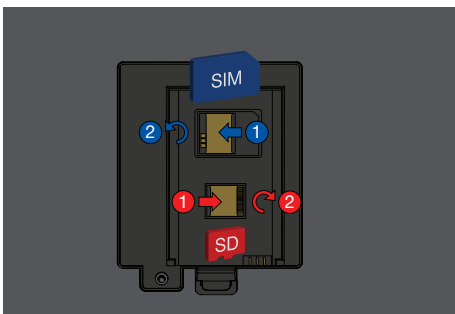


2. Follow same procedure if you want to install a micro-SD card, but this time, slide the metal tab in the opposite direction to unlock it, as shown in the figure. Place the memory card, and then turn down the metal tab and slide to the initial position to lock.

Installation

3. Insert the battery within dedicated compartement, making sure that connector electrodes on the terminal match the slots in the top of the battery as shown in the figure. Replace the lid of the battery compartment, making sure it is securely locked in place.




4. Close the lid of the battery compartment using the screw and supplied key, and use a QC PASS adhesive sticker to cover the screw hole.

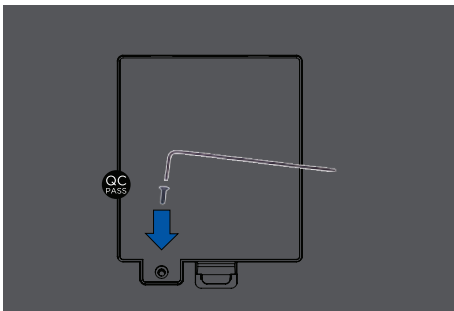


Installation


5. Connect curly cord to the handset and telephone base. Connect one end of the cord to the connector to the left side of the telephone base.

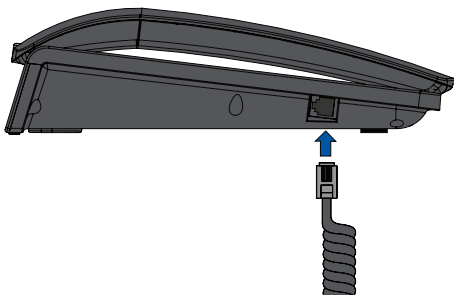

6. Connect the other end of the curly cord into the handset jack, as shown in the illustration.

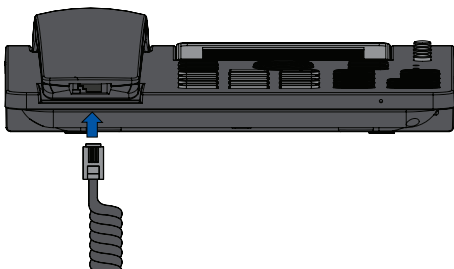

7. Connect power supply cable to the connector on the back of the phone and then plug the power supply into a household AC power outlet. Battery level will be displayed on the screen showing charging process status.

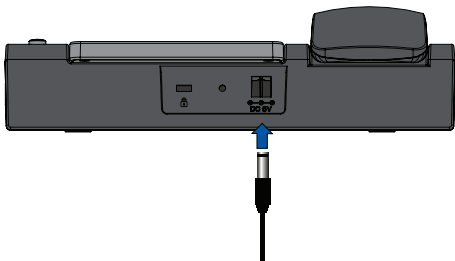










Battery Charge

When battery level is low, the phone will issue a warning tone and a low battery message. Connect power adapter into the device to start charging. Battery level is indicated on the screen during charging process, and once it is fully charged, battery icon will appear full. Charging a completely discharged battery can last 2 to 3 hours. Fully charge the battery before using the device for the first time.

Note:



Always make sure your device is turned off before removing your SIM card. This will prevent data loss and damage to the SIM card. Do not place SIM card near surfaces or electromagnetic environments and avoid touching metal connectors. For more information, contact your network operator.

Keyboard

| Key | Function |
|---|---|
| [] Turn On / Off | When terminal is off, press for 3 seconds to turn on the phone. When terminal is on, press for 5 seconds to turn off the phone. |
| [][] Up / Down | Move the cursor up/down by accessing on-screen menu or submenus. |
| [][] Left / Right | Move the cursor left/right by accessing on-screen menu or submenus. |
| [OK] Confirmation | Confirm operations by accessing on-screen menu or submenu. In standby mode, press to access call log. |
| [][] Soft keys | Use these keys to perform different actions indicated at the bottom of the on-screen menus. |
| [] Pick up | Press to dial an outgoing call or answer an incoming call. |
| [] Hang up | During an active call, press to end the call. In applications, press to return to main menu. |
| [1...9] Numeric pad | Press to enter numbers or characters. |

| Key | Function |
|--|---|
| [*] Asterisk key | Insert asterisk character. |
| [#] Hash key | Insert pad character. Change the text input method. |
| [M1-M4] Memory keys | Programmable keys to store up to four telephone numbers. |
| [Hold] Hold button | During an active call, press to hold current call. During two active calls, press to switch from Call 1 to Call 2. |
| [Transfer] Transfer button | When you have two calls, one active and one holded, press to make a call transfer between both calls. You can make a transfer "Without consultation," pressing when making the second call. |
| [Conf] Conference button | You can make conference calls from your phone, press during a call for 2 or more participants. |
| [R] Recall button | In standby mode, press to redial last number from last log. |
| [Decrease/Increase] Decrease / Increase volume | Press to decrease / increase the volume of handset or speaker. |

Keyboard


| Key | Function |
|--|--|
| [] Mute button | Press during an active call to mute your microphone |
| [] Hands-free button | In standby, press to make a call in hands-free mode, without lifting the handset. During an active call, press to enable or disable phone hands-free mode. |


Numeric keypad

Check the below table when using alphanumeric keypad. When introducing some form of text on your phone, you can switch between entering numbers (123), lower case (abc) or uppercase (ABC) by pressing the # key.

| Key | Lowercase (abc) | Uppercase (ABC) |
|-----|--|-----------------|
| 1 | .,?!-@ 1 | .,?!-@ 1 |
| 2 | abc2 | ABC2 |
| 3 | def3 | DEF3 |
| 4 | ghi4 | GHI4 |
| 5 | jkl5 | JKL5 |
| 6 | mno6 | MNO6 |
| 7 | pqr7 | PQRS7 |
| 8 | tuv8 | TUV8 |
| 9 | wxyz9 | WXYZ9 |
| 0 | [space] and 0 | |
| # | Toggle among: Numbers / Lowercase / Uppercase / Default text | |
| * | Special character selection menu | |

Display

Keep pressing the [] key for more than 3 seconds to turn the unit on. The first time a SIM card is installed, phone will request to enter PIN code. Then, following user interface will be displayed on the screen.

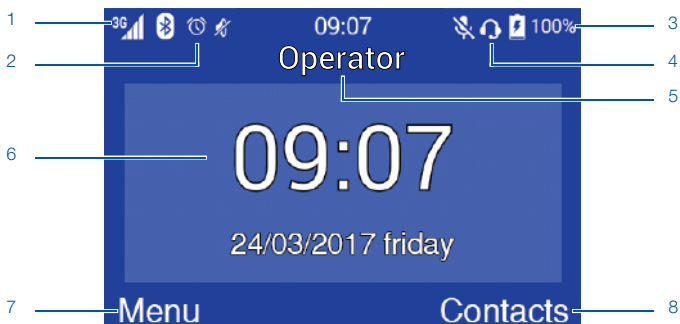

- | | |
|--|---|
| 1. 2G/3G coverage indicator | 5. Network operator |
| 2. System notifications; SMS, calls, alarms, Bluetooth, etc | 6. Time and date |
| 3. Battery level indicator | 7. Function assigned to the left softkey |
| 4. Status indications; microphone, handsfree, earphones, etc | 8. Function assigned to the right softkey |

Press [**OK**] button to display call log, or use the left soft key to access the applications menu. You can also make a call from this interface by directly dialing the phone number from numeric key pad.

To turn off the terminal, press the [] for 5 seconds.

System icons

Following illustration explains the meaning of system main icons that can be displayed on your phone:



Signal level



Data network connection



No signal



Mute



Call



Call end



Call transfer



Hands-free



Call missed



Call hold



Alarm active



SMS text message



MMS multimedia message



No SIM card



Low battery



Charging battery



Bluetooth connected



Bluetooth active



USB connection




Headphones connected



Headphones with mic

Applications menu

Once you turn on the device and complete setup process, main menu will be displayed on the screen. Press left soft key to access applications menu and next user interface will be displayed.

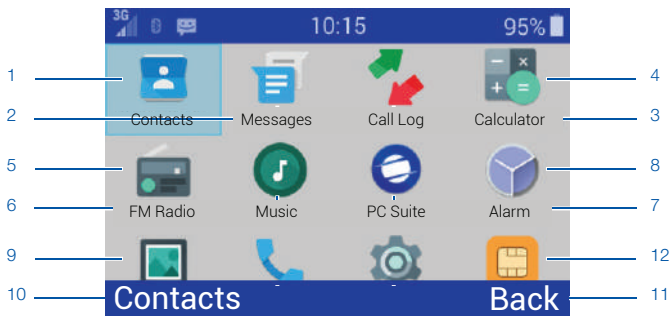

- | | |
|---------------|--------------|
| 1. Contacts | 7. Alarm |
| 2. Messages | 8. Gallery |
| 3. Call log | 9. Telephone |
| 4. Calculator | 10. Settings |
| 5. FM Radio | 11. Operator |
| 6. Music | 12. PC suite |


From the application menu you can also customize main menu. Press the left selection key to display available options:

- **Wallpapers:** choose the wallpaper of the main menu among available backgrounds.
- **Soft key:** select the application associated with the right soft key in the main menu.
- **Call log widget:** enable this option to display call log within main menu, or disable to display the clock.


Applications menu

Under application menu, use the arrow keys [◀][▶][▲][▼] to select one of the icons, and press [OK] button to access the application.


Phonebook

Select the  icon on the applications menu, and press [OK] button to access the phonebook. You can also access your favorite contacts pressing the right soft key on the main menu interface (by default).


Messages

Select the  icon within application menu, and press [OK] button to access the phone's messaging application. Within this you can compose and send SMS text and MMS multimedia messages, as well as check received messages.

Call log


Select the  icon on the applications menu, and press [OK] button to access call log. From this menu you can consult record of made, received and missed calls in phone.

Calculator


Select the  icon on the applications menu, and press [OK] button to access call log. Use the keys displayed at the bottom of the interface to perform the different arithmetic functions.

Applications menu


FM radio

Select the  icon on the applications menu, and press [**OK**] button to access FM radio application. Use the arrow keys [**◀**] [**▶**] to choose searching mode manual (◀ ▶) or automatic (◀▶), and press [**OK**] button to search for radio stations. To stop radio function, press left soft key to display the options menu and select **Power**.


Music

Select the  icon on the applications menu, and press [**OK**] button to access audio player. Use the arrow keys [**◀**] [**▶**] to select sorting type, and [**▲**] [**▼**] to choose desired file. Press [**OK**] button to start playing, or press left soft key to access playback options, as well as delete files or share by message or Bluetooth.

Alarm


Select the  icon on the applications menu, and press [**OK**] button to access alarm application. Press [**OK**] button to enable or disable focused alarm, or press left soft key to edit, delete or add new alarms.

Gallery


Select the  icon on the applications menu, and press [**OK**] button to access picture gallery. In this application you can play picture and video files stored in phone memory. Use the arrow keys [**◀**] [**▶**] [**▲**] [**▼**] to browse through folders and files, and press [**OK**] button to play. Press left soft key to access playback options, as well as delete files or share by message or Bluetooth.

Applications menu

Call menu


Select the  icon on the applications menu, and press [**OK**] button to access call menu. From this menu you can make calls to contacts from the phonebook, dial a phone number, or send text messages. You can also assign phone numbers to speed dial keys [**M1-M4**], as well as to buttons from the numeric keypad [**1...9**]. Press left selection key to display menu options, and follow on-screen instructions.

System settings menu

Select the  icon on the applications menu, and press [**OK**] button to access system settings menu. Use the arrow keys [**▲**] [**▼**] to select display settings, sound, language, Bluetooth, etc., and press [**OK**] button to access configuration.

PC suite

There is a PC application available for your Co-Comm F700 that allows you to manage your calls, messages, contacts, etc. easily from your personal computer. You can download the PC application for your Co-Comm F700 from our website <http://www.cocomm.es/pcsuite>.

Install and launch the application downloaded on your PC. Select the  icon on the applications menu of your phone, and press [**OK**] button to access the PC suite mode. Connect an USB cable between the terminal and the PC, and then press **Options** and select **Start PC Suite** on the pop up window to connect your Co-Comm F700 to the application installed on your PC.

Settings

BLUETOOTH

DISPLAY

- └ Brightness
- └ Wallpaper
- └ Sleep

SOUND

- └ Volumes
- └ Phone ringtone
- └ Default notification sound

LANGUAGE

CALL SETTINGS

- └ Voice call
- └ Other settings
 - └ Fixed dialling numbers
 - └ Minute reminder
 - └ Quick responses
 - └ TTY mode
 - └ International dialling assist

DATE & TIME

- └ Automatic date & time
- └ Automatic time zone
- └ Set date
- └ Set time
- └ Select time zone
- └ Use 24-hour format
- └ Choose date format

SECURITY

- └ Owner info
- └ Set up SIM card lock
- └ Make passwords visible
- └ Factory data reset

NETWORKS

- └ Data connection
- └ Network mode
- └ Access point names
- └ Network operators



ABOUT PHONE

- └ Status
- └ Model number
- └ SW version
- └ Date compilation






Calling

There are several ways to perform callings with your terminal Co-Comm F700:





Calling using alphanumeric keypad

1. In standby mode, pick up the handset, enter the phone number using alphanumeric keypad and press [] button to call.
2. To end the call, press the [] button or hang up the handset.



Calling in hands-free mode

1. Without picking up the handset, enter the phone number using alphanumeric keypad and press [] button to call. The  indicator will glow green, indicating that hands-free mode is active.
2. During an active call, press [] button to start hands-free mode and check how the  indicator lights up.
3. To end the call, press the [] button or hang up the handset.








Answer or silence an incoming call

1. During an incoming call, pick up the handset or press [] button to answer the call.
2. Before the call is answered, you can mute the ring tone of incoming call by pressing the [] button.
3. When the call is active, press the [] button to mute your microphone.
4. To reject an incoming call, press the [] button.






Adjusting the volume

During an active call, press the [] [] buttons to respectively decrease or increase the volume of your headset or hands-free.





Calling from call log

1. In standby mode press [**OK**] button or directly press the [] button to access call log. Last call will be displayed.
2. Use the arrow keys [] [] to display on the screen the list of outgoing, incoming or missed calls. Use the arrow keys [] [] to scroll up and down the list, select an item and press the [] button to call.
3. To end the call, press the [] button or hang up the handset.

Calling from phonebook




1. In standby mode, press left soft key to access applications menu, and then select the  icon to display the phonebook.
2. Use the arrow keys [] [] to scroll up and down contact list and select desired contact.
3. Select phone number and press [] button to call.
4. To end the call, press the [] button or hang up the handset.

Transfer an incoming call


1. During an incoming call, pick up the handset or press [] button to answer the call.
2. Press [] button to pause the active call and start a second call to another phone number or contact from the phonebook, or press [Options](#) and select [Add call](#) from popup menu.
3. When a second call is active, press [] button to transfer the incoming call to the second contact, or press [] button before second call is active for a transfer “without consultation”.

Calling


Three way calling

1. During an incoming call, pick up the handset or press [] button to answer the call.
2. Press [] button to pause active call and start a second call to another phone number or contact from the phonebook.
3. When a second call is active, press [] button, or press **Options** and select **Merge calls** from popup menu to start multi conference.
4. Repeat operation to add up to 5 participants.

Calling with speed dial keys

1. In standby mode, press one of the memory keys [**M1-M4**], or hold down a key on the numeric keypad [**1...9**] to use speed dialing. Call will start automatically.
2. To end the call, press the [] button or hang up the handset.


Configuring speed dial keys

1. Go to the applications menu, select the  icon and press [**OK**] button to access the calls directory.
2. Press **Options** and select **Speed Dial** from popup menu.
3. Choose one of the speed dial memories **M1-M4**, or **1-9** to edit its contents.
4. You can associate a phone number or a contact from the phonebook to the memory keys [**M1-M4**], while to the number keys [**1...9**] you can only associate contacts from the phonebook.
5. Select **Add** to confirm and complete operation.

Note:

Please ensure that contacts have been installed within memory keys before using speed dial keys. The [1] key is reserved for voicemail function.


Calling the voicemail

1. In standby mode, press and hold the [1] button to call voicemail. Call will start automatically.
2. To end the call, press the [] button or hang up the handset.


Messages

The Co-Comm F700 terminal supports SMS text messaging and MMS multimedia messages. This section explains how to send and receive messages and other associated features.


Create and send messages

1. Go to the application menu, select the  icon and press [**OK**] button to access the phone's messaging application.
2. Press **Options** and select **New message** from popup menu.
3. Enter the phone number or the contact name that you want to send a message to. Press the [**#**] key to switch between uppercase, lowercase, and number, or use the [*****] key to enter special characters.
4. If you want to send a message to a contact from the phonebook, press **Options** and then press [**OK**] button over **Select contact** from popup menu.
5. Type text message in the field. If you want to add media files to your message, press **Options** and then press [**OK**] button over **Attach** from popup menu.
6. Press **Options** and then press [**OK**] button over **Send by** to send message.


View and reply to messages

1. Go to the applications menu, select the  icon and press [**OK**] button to access phone's messaging application.
2. Select one of the messages from the list and press [**OK**] button to display.
3. To reply message, write the text within dedicated area. If you want to add media files to your message, press **Options** and then press [**OK**] button over **Attach** from popup menu.
4. Press **Options** and then press [**OK**] button over **Send by** to send the message.


Delete messages

1. Go to the applications menu, select the  icon and press [**OK**] button to access phone's messaging application.
2. Select one of the messages from the list and press [**OK**] button to display.
3. Press **Options** and then press [**OK**] button over **Select message** from the popup menu. Choose the message you wish to delete and then press [**OK**] button to mark.
4. Press **Options** and then press [**OK**] button over **Delete message** to remove it from the inbox.

Empty inbox

1. Go to the application menu, select the  icon and press [**OK**] button to access device messaging application.
2. Press **Options** and then press [**OK**] button over **Delete all threads** from popup window.
3. Select **Delete** in the confirmation window to complete the operation and delete all messages from the inbox.

Message settings

1. Go to the application menu, select the  icon and press [**OK**] button to access device messaging application.
2. Press **Options** and then press [**OK**] button over **Settings** from popup window. You may customize following settings:
 - **Text message (SMS):** press to access text messages settings:
 - **Request delivery report:** select this option to receive a delivery report when sending a message.
 - **Manage SIM card messages:** use this option to delete messages and check available and used space on the SIM card.

Messages

- **Edit quick text:** this option allows you to edit and add quick texts which can be inserted in your messages.
- **SMS service center:** messaging server network operator, this field should not be modified.
- **SMS storage location:** It allows you to choose between SIM card or phone memory for storing messages.
- **Optimization:** enable this option to send messages in optimized mode (GSM 7 bit), or disable if you want to use accent marks and other special characters in your text messages (Unicode UCS2).
- **Multimedia message (MMS):** press to access multimedia message settings:
 - **Group messaging:** use this option to send a message to multiple recipients using MMS.
 - **Request delivery report:** select this option to receive a delivery report when sending a message.
 - **Request read report:** select this option to receive a read message report when sending a message.
 - **Send read report:** select to send a read message report when it is required by the sender.
 - **Auto-retrieve:** use this option to automatically download messages.
 - **Roaming auto-retrieve:** use this option to automatically download when you are in data roaming.
 - **Creation mode:** in free mode, a text message is converted to MMS when you exceed the maximum authorized numbers of characters.
 - **Size limit:** it allows you to choose maximum size for MMS messages.
 - **Priority:** it allows you to choose priority for MMS messages.

- **Notifications:** press to access message notifications settings:
 - **Message notifications:** press to activate or disable message notifications.
 - **Mute:** use this option to temporarily mute message notifications.
 - **Sound:** choose alert message tone.
 - **Popup notification:** displays pop-up notifications for Push messages. Push messages are notifications that a server sends to an application alerting that there is a new information such as an email or a chat message.
- **General:** press to access general message settings:
 - **Message font size:** select text size for your conversations.
 - **Show email address:** press to include email address in contact messages.
 - **Storage settings:** it allows you to set a limit of stored messages from which the oldest messages will be deleted automatically.
 - **Cell broadcast settings:** enables cell broadcasting in the SIM card.
 - **Service message settings:** enables the reception of WAP Push messages. A WAP Push message is a type of SMS that is used to directly access a WAP site or page, usually to download files. User sends an SMS and receive another one with a welcome message to an URL, which when accepted opens requested address in WAP browser.


Contacts

This section explains how to create and manage your phonebook.


Creating a new contact

1. In standby mode, use alphanumeric keypad to enter new contact number.
2. Press **Options** and select **Add to contacts** from the popup menu.
3. Press **Create new contact**, and then select the destination in which contact will be saved (SIM card, phone, online account, etc.).
4. Fill out the form with the data you want to enter for new contact, and press **Done** to save the entry and complete operation.


Creating a new contact from call log

1. Go to the applications menu, select the  icon and press [**OK**] button to access phone's call log.
2. Use the arrow keys [**◀**] [**▶**] to display on the screen the list of outgoing, incoming or missed calls, and use the arrow keys [**▲**] [**▼**] to select a call and press [**OK**] button to display.
3. Press **Options** and select **Edit number before call** to display telephone number on the screen.
4. Press **Options** and select **Add contacts**, and then press **Create a new contact**, and select destination where contact is to be stored (SIM card, phone, online account, etc.).
5. Fill out the form with the data to be entered for the new contact, and press **Done** to save entry and complete operation.


Import/Export contacts

1. Go to applications menu, select the  icon and press [**OK**] button to access the phonebook.
2. Press **Options** and select **Import/Export** from popup menu.
3. Choose the source from which you want to copy contacts (SIM card, phone, internal memory, etc.).
4. Select the destination you want to copy contacts in.
5. Select the contacts you want to copy, or press **Options** and then **Select all** to select all contacts within data source, and press **OK** to complete operation.

Contact edit

1. Go to the applications menu, select the  icon and press [**OK**] button to access phonebook.
2. Use the arrow keys [**▲**] [**▼**] to select a contact and press [**OK**] button to display.
3. Press **Options** and select **Edit** from popup menu.
4. Fill out the form with the data to be entered for the new contact, and press **Done** to save the entry and complete operation.

Delete contact


1. Go to applications menu, select the  icon and press [**OK**] button to access the phonebook.
2. Use the arrow keys [**▲**] [**▼**] to select a contact and press [**OK**] button to display.
3. Press **Options** and select **Delete** from popup menu.
4. Select **OK** in the confirmation window to delete contact.

Bluetooth® connection

Bluetooth® function allows you to pair your terminal with other Bluetooth devices. It also allows additional functions:

- Exchange contacts and video, audio and photo files with other paired Bluetooth devices.
- Connect Bluetooth accessories, such as Bluetooth paired headphones to answer received calls by the terminal.


Pairing to a Bluetooth® device

1. Select the  icon in the applications menu, and press [OK] button to access system settings menu. Use the arrow keys [▲][▼] to select **Bluetooth**, and press [OK] button to enable Bluetooth function.
2. Press [OK] button on terminal name to activate temporary device visibility, and do the same on the other device you want to pair.
3. Press [OK] button over **Search for devices**, and all visible Bluetooth devices within the range of the terminal will be displayed on the screen.
4. Press [OK] button on the device you want to pair to your terminal, and enter requested code within pop-up window on both devices. Once setup is complete, press **Options** to change name of paired devices and make audio adjustments.

Once Bluetooth function is enabled, the  icon will be displayed in the notification bar. If any previously paired device is within terminal range, it will be automatically connected, and the  icon will light up in the notification bar.

To disable Bluetooth function, access Bluetooth setup menu within the system settings, press **Options** and select **Off** in pop-up menu. Within this menu you can also rename your terminal or change visibility timeout for Bluetooth function.

Phone can not be turned on

- Be sure to hold down the [] button for more than 5 seconds.
- Make sure battery is properly connected to your phone.
- Remove the battery, reinstall it and restart your phone.
- If the battery is low, recharge it.

Phone asks for PIN code

- PIN lock feature is enabled. Each time the phone is switched on, PIN must be entered (if you are using your phone for the first time, you must enter the PIN code provided with SIM card).

Phone asks for PUK code

- PIN code has been entered incorrectly three times, and now SIM card is locked. Enter PUK code provided by your network operator.

Phone asks for unlock code

- The automatic locking function has been enabled in the phone. You must enter unlock code before you can use your phone.

SIM card error

- Clean metal contacts on the SIM card with a clean cloth (do not use a solvent).
- SIM card is not properly placed. Insert SIM card according to the unit figure.
- The SIM card is damaged, contact your network provider.

Troubleshooting

Network failure

- It is possible that the phone is located in a weak signal area, move to a place with a stronger signal.

It is out of network service coverage

- SIM card is not valid, contact your network provider.

You have entered a number but the phone is not calling

- Make sure you have correctly pressed the button.
- Check call barring options. Verify that barring is disabled for contact number.
- Check the fixed dialing setting is disabled.
- Check that the SIM card is within network coverage.
- Your network operator may be experiencing connection problems.

Call quality is poor

- Check the volume.
- It is in a weak signal area, such as near tall buildings or in a basement. Move to a location with better signal strength.
- Your network operator may be experiencing connection problems.

Your correspondent can not call you

- Make sure the phone is turned on and connected to a network.
- Make sure SIM card is not locked.
- Check that SIM card is within network coverage.
- Check that you have not set an incoming call barring.

Your correspondent can not hear you

- Increase handset volume.
- Check that handset cable is securely connected to the phone.

Battery duration in standby mode is too short

- Battery standby duration is related to network configuration. You may be in a weak signal area. If the phone can not receive signals, it will keep sending a signal to search network and consume additional power, which shortens battery duration.

Battery needs to be changed

- If the battery cannot charge properly.
- Make sure power cord is properly connected to efficiently charge.
- Clean charging contact from the device and battery with a clean, dry cloth.
- Replace the battery or charger if it seems to be damaged.

If the above guidelines do not help in solving the problem, note model and serial numbers of your phone, your warranty details and a clear description of the problem. Then contact with your after-sales service provider.

Regulation

Through this, CO-COMM Servicios Telecomunicaciones S.L. declares that this product meets the essential requirements and other relevant provisions of Directive 2014/53/UE (RED), of the European Parliament and the Council of April 16, 2014.

You can obtain a copy of the declaration of conformity with the directive mentioned by sending an email to clientes@cocomm.es, adding the word DoC in the Subject line, and specifying the lot number of the product in the body of the message. This product can be used in all EU countries (and other countries following the 2014/53/UE directive).



ErP product information

Through this, CO-COMM Servicios Telecomunicaciones S.L. declares that this product complies with Directive 2009/125/EC and its implementing regulation (EC) N°1275/2008 amended by (EC) N°278/2009, (EC) N°642/2009, (EU) N°617/2013, (EU) N°801/2013, and its implementing regulation (EC) N°278/2009.

Energy consumption of the product, connected to network, in standby, and with all its physical and wireless interfaces connected, is 0.196 W.

With regards to information required by the regulations (EU) N°801/2013 that appears on websites free access for manufacturers, visit <http://www.cocomm.es>.

SAR certification information

This mobile device meets guidelines for exposure to radio waves.

It is a radio transmitter and receiver low power. It is designed not to exceed the limits for exposure to radio waves as recommended by international guidelines.

These guidelines were established by the International Commission on Non-Ionizing Radiation (ICNIRP), which is an independent scientific organization, and include safety measures designed to ensure the protection of persons, regardless of age or health status.

Specific Absorption Rate (SAR) is the unit of measurement for the absorbed radio amount when using mobile devices. SAR tests are conducted in standard operating positions with the phone transmitting at its highest certified power level, however, actual SAR level of the phone while operating can be well below maximum value. In general, the closer you are to a base station, the lower phone power is being reduced. SAR values may vary, depending on the phone being used. To ensure safety and health of users, phone is designed and manufactured to meet radio exposure guidelines. Recommended SAR limit by the Council of the European Union for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device, which was tested for use at the ear is for SAR below the recommended limit.

Highest SAR value found during product certification is 0.36 W/kg averaged over 10g of tissue, measured on GSM900 band.

Regulation



This product complied with Directives 2012/19/EU (WEEE Directive) and 2011/65/EU (RoHS2 Directive) and Regulation (EC) N°1907/2006 (REACH), and bears selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive

2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included within selective sorting process are potentially dangerous for the environment and human health due to presence of hazardous substances.

Final product price is including the environmental management cost of the electronic residues, as it is established legally in the R.D. 208/2005.



Bluetooth® mark and logos are owned by Bluetooth SIG, Inc.

All other trademarks, products, services and company names mentioned herein belong to their respective owners.

Copyright © CO-COMM Servicios Telecomunicaciones S.L. 2020. All rights reserved. CO-COMM Servicios Telecomunicaciones S.L. reserves the right to change or modify any information or specifications contained in this manual without previous notice.



Copyright © CO-COMM
Servicios Telecomunicaciones S.L. 2020
All rights reserved